emati c®
STYLE. INNOVATION. YOU.

7” CAPACITIVE TOUCH SCREEN 4GB Wi-Fi Ready TABLET with ANDROID™

User’s Manual

eGlide Pro

eGlide Pro Tablet

User Manual

TABLE OF CONTENTS

Introduction **1**
Regulatory Information: FCC Part 15 ..... **2**
Important Safety Precautions **3**
Main Features **4**
Controls and Connections **5**
Getting Started **6**
Charging 6
Inserting Media 7
Connecting to the PC 7
Turn On/Off 8
Lock and Unlock 8
Home **9**
Extended Home Screen 10
Customizing the Home Screen 10
Applications Menu 13
Using the On-screen Keyboard **14**
Sleep/Wake Button 15
Making a Wireless Connection **15**
Browser **16**
Open Browser 16
Set Your Home Page 16
Open a Web Page 16
Refresh a Web Page 17
Zoom In and Out of a Web Page 17
Open a New Browser Window 17

Finding Text within a Web Page 17
Downloading Unknown Applications from the Web 18
Manage Bookmarks 18
Customize Browser Options 19
Email 20
Open Email 20
Account Settings 21
Reading Emails 22
Gallery 23
Music Player 24
Video Player 25
Clock 26
Calculator 28
AppInstaller 28
File Browser 30
Settings 32
Set Date and Time 35
Frequently Asked Questions 35
Specifications 36
Limitations of Liability Statement 37

Introduction

Thank you for purchasing this tablet.

This tablet enables you to surf the Internet via a wireless connection with multimedia playback.

This manual contains important safety information and operation instructions, so please read all the instructions carefully before using. Keep this manual for future reference.

We have done our best to produce a complete and accurate manual; however, we cannot ensure there are no errors or omissions. We also have no responsibility for damages or loss of data caused by improper operation.

The instruction manual is subject to change for improvement without notice.

Trademarks and trade names used in this user manual are owned by their respective companies or organizations.

Regulatory Information: FCC Part 15

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Important Safety Precautions

Always follow these basic safety precautions when using your tablet. This will reduce the risk of fire, electric shock, product damage and personal injury.

- **Warning:** To reduce the risk of electric shock, do not remove the cover or back of your tablet. Refer servicing to qualified personnel.
- **Warning:** To prevent fire or electric shock hazard, do not expose the tablet to rain or moisture.
- Do not expose the tablet to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit.
- Keep the tablet away from direct sunlight and heat sources, such as radiators or stoves.
- Do not block the ventilation openings. Slots and openings on the unit should never be blocked by placing your tablet on a cushion, sofa or other soft surface.
- Do not place the tablet on an unstable cart, stand, tripod, bracket or table. The unit may fall, resulting in possible damage or injury.
- Never place heavy or sharp objects on the LCD panel or frame.
- Only use the AC adapter included with tablet. Using any other adapter may damage the tablet and will void your warranty.
- Protect the power cord from being walked on or pinched particularly at plugs, receptacles and where the cord attaches to the tablet.
- Unplug the power cord from the electrical outlet when the unit is not in use.

Cleaning

- Before cleaning the tablet, make sure to turn it off.
- Never spray or pour liquid directly onto the screen or plastic casing.
- To clean the LCD screen, wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles. If

the screen is still not clean, apply a small amount of non-ammonia, non-alcohol based spray cleaner on a clean, soft, lint-free cloth to clean the screen.

- To clean the plastic casing, use a soft, dry cloth. If it is still not clean, apply a small amount of non-ammonia, non-alcohol based, mildly non-abrasive detergent on a clean, soft, lint-free cloth to clean the surface.
- To clean the frame, use a soft, dry cloth. The socket-outlet should be installed near the equipment and should be easily accessible.

Warning: Excessive sound pressure from earphones and headphones can cause hearing loss.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS
THIS EQUIPMENT SHOULD BE INSTALLED AND OPERATED WITH MINIMUM DISTANCE 20CM BETWEEN IT & YOUR BODY.

Disclaimer: The Authorized Dealer does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or plastic casing. Some chemical cleaners have been reported to damage the screen and/or display case. The Authorized Dealer will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

Main Features

- 7-inch TFT LCD Capacitive touch screen, 800*480 Resolution 16:9 Display
- Decorative appearance, good quality
- Surf the web via wireless connections
- Send and receive e-mails
- Listen to music, view pictures and videos
- Download, install and play games.
- Download, install and use Android Applications.

Controls and Connections

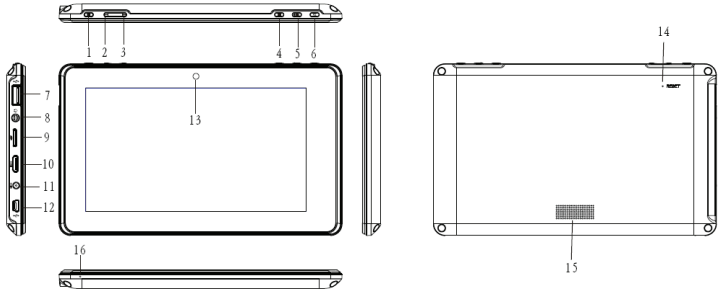

1. Power/Lock button
2. Decrease the volume
3. Increase the volume
4. Menu button: press to open menu option
5. Home button: press to go to Home screen
6. Back button: press to return to previous screen
7. Host USB connector
8. Earphone jack socket
9. Micro SD card socket
10. HDMI connector
11. DC jack socket
12. Mini USB connector
13. Camera sensor
14. Reset hole
15. Speaker
16. Built-in microphone

Getting Started

Charging

Your device comes with a Lithium polymer-integrated rechargeable battery.

Before you start using your device, you need to charge the battery; they are not pre-charged. On initial charge, device should be charged for 4 hours to obtain full battery potential. After initial charge, battery will charge fully in 2 hours.

Follow the steps below to connect your tablet to the power outlet and charge the battery.

- Plug one end of the AC power adaptor into the power jack on your device.
- Plug the other end into a power outlet. The charge icon indicates that the device is charging.

Note: *The charging icon will light up when the battery is charging. Once the battery is fully charged, the charging icon will turn green*

If your device is totally out of battery power, it may take a while before you can recharge the battery and power on your device. Only plug in the charger-adapter when charging.

Battery performance depends on your charging usage.

Tips to improve battery performance

Since the device has a large screen, it can consume a lot of power. To extend battery life between chargings, you can do the following:

- Reduce display brightness.
- Reduce web searches.
- Turn off Wi-Fi.

NOTE: *To prevent battery from running down if you do not use the tablet for an extended period, charge and discharge the battery fully once every month.*

- *Built-in Lithium polymer batteries have to be charged regularly. Battery damage caused by excessive consumption of polymer battery is not covered by guarantee. Use of a charger other than the charger indicated for this tablet is also*

not covered by the guarantee.

If the device has a low battery charge, you cannot connect to the PC to copy files without first charging the battery.

If the device has shut down, Power on before connecting to a PC to copy files.

Inserting Media

The device supports Micro SD cards.

You can operate music, photos, document files, video and applications on the device through a memory card.

When there is no Micro SD card inserted, your device will read from its internal memory.

Note: Do not use force when inserting a memory card.

Connecting to the PC

Files can be transferred directly to the device by using the USB data cable.

- Make sure that your computer is powered on before you start.
- Connect the mini plug of the USB cable to the mini USB port on your device and plug the other end into a free USB port on your PC.
- The computer will detect **New Hardware** and start to install the tablet's driver automatically. Wait for the system to finish the installation. When it has finished, a new **Removable Disk icon** will be created .
- When the device displays **USB Connected**, tap **"**Turn on USB Storage."Then, the screen will show a yellow interface: **Turn off USB storage.**
- Drag and drop the files on your computer to the **Removable Disk.**
- To disconnect the USB cable from the computer, double-click the **Safely Remove Hardware** icon on the task bar. Click **USB Mass Storage Device** and **"OK."** Then you can safely unplug the player.

Note: *Before connecting it to a PC, make sure that you have turned on your tablet.*

Please do not disconnect the USB cable during downloading or uploading. It may cause malfunction of the player and corruption of files.

Turn On/Off

- To turn on the device, press and hold the **Power/Lock** button.
- To turn off the device, press and hold the **Power/Lock** button.

Lock and Unlock

Lock the device manually

- Press the **Power/Lock** button

Unlock the device

- Press the **Power/Lock** button
- Touch and drag **Unlock** icon from the bottom of the screen to the top.

You can also set the Master Volume level from the **Lock** screen. Touch and drag **Sound** icon from top of the screen to the bottom, to change between ON and OFF modes.

Home

The Home screen is the starting point for using your device.

1. Tap icon to enter Home screen
2. The notification panel shows information about connections, messages, and other items. Slide your finger downward from top of the screen.
3. Wi-Fi Internet connection
4. Battery status
5. Current Time

6. Adjust Volume,V+ or V-
7. Tap to exit and return to Previous Screen
8. Tap to open Menu options
9. Tap to browse the Internet
10. Another way to browse the Internet
11. Application icon, tap to open Application menu
12. Settings
13. Slide to move to the Extended Home screen
14. Search

Extended Home Screen

The Home screen consists of the Home screen, plus 4 screens that extend beyond the display width, which provide more space for adding shortcuts, widgets, and folders.

Slide your finger horizontally across the Home screen to scroll to the left or right side Extended Home screens.

As you scroll, the indicator at the left shows your current position.

Customizing the Home Screen

Customize the Home screen to suit your preferences.

Add Shortcuts

Use Shortcuts for quick access to applications.

-- Navigate to a Home screen, then touch and hold on the screen to display the “Add to Home screen” menu. Or, press **Menu** key/tap on the home screen, then tap **Add** to pop up the “Add” window.

-- Tap **Shortcuts**, tap a selection, then follow the prompts to add it to the Home screen: **Applications**, **Bookmarks**, **Contacts**, **Music Playlist**, **Settings,** etc.

- **Adding Shortcuts from Applications**

-- Navigate to a Home screen
-- Tap “Applications”
-- Touch and hold an application’s icon. The shortcut icon is automatically added to the selected Home screen.

- **Removing Shortcuts**

-- Touch and hold the **Shortcut** icon until the application changes into the trash bin. Then drag the icon into the trash bin until both the icon and the trash bin turns red . After that, release your finger from screen to remove the widget from the Home screen.

Add Widgets

Widgets are self-contained applications that you can place on the Home screen to enter your favorite features.

- **Adding Widgets to Home screen**

-- Navigate to the desired Home screen, then touch and hold “Add to the Home Screen” menu. Or, press **Menu** key/tap on the Home screen, then tap “Add” to pop up the Add window.
-- Tap **Widgets**, then tap the widget you want to add to a home screen.

- **Removing Widgets**

-- Touch and hold the **Widget** icon until the application changes into the trash bin. Then drag the icon into the trash bin until both the icon and the trash bin turns red . After that, release your finger from the screen to remove the widget from the Home screen.

Adding Folders

Place Folders on the Home screen to organize items together on the Home screen. Or, press **Menu** key/tap on the Home screen, then tap “Add” to pop up the Add window.

-- Navigate to the desired Home screen, then touch and hold on the screen to display the “**Add to Home Scree**n” menu.

-- Tap “Folders,” and then tap “New Folder.”

Removing Folders

-- Touch and hold the **Folder** icon until the application changes into the trash bin. Then drag the icon into the trash bin until both the icon and the trash bin turns red . After that, release your finger from the screen to remove the folder from the Home screen.

Change the Wallpaper

Choose a picture to display in the background of the Home screen. You can choose from pre-loaded wallpaper images.

-- From a Home screen, touch and hold screen to display the **Add to Home Screen** menu, then tap “Wallpapers.” Or, press **Menu** key/ tap on the home screen, then tap “Add” to pop up the **Add** window.

-- Choose a source image:

-Gallery: Choose a picture from an installed memory card. Tap a picture to select it, then use the **Crop** tool to resize the picture. If desired, tap “Save” to save the pictures as wallpaper.

- Live wallpapers: Choose from pre-loaded interactive animated wallpapers. Tap a wallpaper to see an example, then tap “Set wallpaper.”

- Wallpapers: Choose from pre-loaded wallpaper images. Tap a wallpaper to see a selection, then tap “Set wallpaper.”

Applications Menu

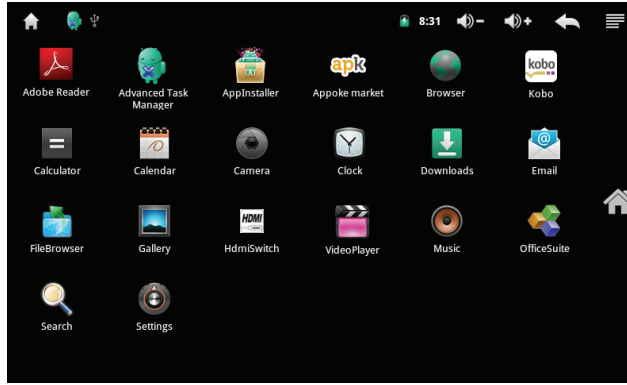

The **Applications** menu displays all of the tablet's applications. Applications that you download and install from the Internet, or copy from another drive, are also added to the **Applications** screen.
You can manually place shortcuts to applications on the Home screen, for quick access to those applications.

- From a Home screen, tap "**Applications**." Icon
- Slide your finger from the top to bottom of the screen to scroll the **Applications** screens.
- Tap an icon to launch the desired application.

Using the On-screen Keyboard

The onscreen keyboard lets you enter text, such as passwords, filenames, email messages, etc. It appears automatically when you launch certain applications or when you tap on a text or number field.

- Tap on a text or number field to manually bring up the keyboard.
- When entering text or numbers, each letter or number appears above the key you have pressed.
- Tap “ABC” (character), ⇧(Capitalized or not), “?123” (number), or “ALT” (symbols) on the onscreen keyboard to switch between different input modes.
- Tap and hold the word you have typed to activate the following edit text options: **Select Word**, **Select All**, **Input Method, or Add“__” to Dictionary**
- Press **Back** key or tap to exit.

Sleep/Wake Button

When you are not actively using the tablet, you can quickly press the [⏻] button to turn off the display and save the battery. When you turn off the display, nothing happens if you touch the screen. You need to quickly press the [⏻] button to turn back on the display.

Making a Wireless Connection

Before you can surf the Internet, send and receive emails, download content, or download applications, you must join a Wi-Fi network that is connected to the Internet.

For Wi-Fi networks that are not secured with a PIN code, you can easily connect to them and access the Internet for free. However, for Wi-Fi networks that are secured with password, you need to have the password to access the Internet.

- From the Home screen or Application menu, tap **Settings** to enter setting interface. Or on the Home screen, press **Menu** key or tap ,and then select **Settings** on the menu bar.
- Tap “Settings” and then “Wireless & Networks.”
- Tap “Wi-Fi” to turn on wireless connection. A ✓ will appear in the Wi-Fi checkbox.
- Tap **Wi-Fi Settings**. Your device will start to scan for the networks within range and will display a list of available Wi-Fi networks.
- Choose the Wi-Fi network that you want to connect to. If the network is not secured with a password, your device will start to establish a link with it.
  If it is a secured network, you will be prompted to select the security option (for networks secured with WEP) and enter the wireless password.
- Tap on the password field to launch the onscreen keyboard. Enter the password and tap “Connect.”
- Your device will start to establish a link to the network. Once a connection established, **—Connected** will appear

below the name of the Wi-Fi network.

Press the Home key to return to the Home screen, the icon will appear on the status bar of your Home screen.

Note: *This device does not support 802.11n network. Make sure your network connection is 802.11b/g.*

Browser

The device is equipped with a full HTML Browser, which allows you to enter the Internet.

Note: *You must join a Wi-Fi network that is connected to the Internet before you can surf the web via the browser application.*

Open Browser

From a Home screen or Applications menu, tap “Browser.”

Set Your Home Page

By default, the home page is **www.google.com**

- To set another Home Page, press **Menu** key or tap and then tap “More.”
- Tap “Settings” and choose **Set Home Page**.
- In the **Set Home Page** dialog box, tap on the URL input field to launch the onscreen keyboard.
- Enter the URL of your chosen Home Page and tap “Done.”
- Tap “OK” to confirm.

Open a Web Page

- From the **Browser** window, press the **Menu** key or tap and tap “Go.”
- Enter the web address in the URL field using the onscreen keyboard and tap “Go.”

Note: *As you enter the address, matching web page addresses will appear on the screen. Tap an address to go directly to that web page or continue to enter the web page address.*

Refresh a Web Page

- While on the Internet, press the **Menu** key or tap .
- Tap **"**Refresh**."**

Zoom In and Out of a Web Page

- Launch the Zoom control by sliding across the screen in one direction.
- Tap the Zoom control icon to zoom in and zoom out.

Open a New Browser Window

You can open multiple browser windows and switch between different web pages.

- In the **Browser** window, press **Menu** key or tap and tap "New Window."
  A new browser window will open and display the Home page.

Switch between browser windows

- In the **Browser** window, press **Menu** key or tap and tap "Windows."
- Tap to select the browser window you wish to display.

Finding Text within a Web Page

- While on the Internet, press the **Menu** key or tap and then tap "More" > "Find on page."
- Tap on the input field to launch the onscreen keyboard.
- Enter the text using the onscreen keyboard and tap "Done."
  The matching texts are highlighted on the screen.
- Tap **<** or **>** to go to the **Previous** or **Next** matching text.

Downloading Unknown Applications from the Web

Before you can download web applications, you must first enable downloading from the **Settings** menu.

- Press the Menu key or tap . Then tap “Settings” and “Applications.”
- Tap on **Unknown Sources** to enable or disable the downloading of unknown applications.
  When enabled, a ✓appears next to the option.
  Note: To protect your device and personal data, download applications only from trusted sources.

View your downloads

- In the Browser window, press **Menu** key or tap . Then tap “More” “Downloads” or “Home Screen Downloads.”

Manage Bookmarks

You can store as many bookmarks as you want on your device.

Bookmark a Web Page

- In the **Browser** window, go to the web page you want to bookmark.
- Press **Menu** key or tap and then tap “Bookmarks.”
  The **Bookmark** options will open.
- Tap “Add Bookmark” and enter a bookmark name.
- Edit the location if needed.
- Tap “OK.”

Open a Bookmark

- In the **Browser** window, press the **Menu** key or tap and then tap “Bookmarks.”
  The **Bookmark** option will open.
- Tap to select the desired bookmark.

Customize Browser Options

You can customize the **Browser** by setting the **Display**, **Privacy**, and **Security** options. In the **Browser** window, press the **Menu** key or tap . Then tap “More” and “Settings” to modify the following browser settings according to your preference:

- **Page Content Settings**
  - Text size
  - Default zoom
  - Open pages in overview
  - Text encoding
  - Block pop-up windows
  - Load images
  - Auto-fit pages
  - Landscape-only display
  - Enable JavaScript
  - Enable plug-ins
  - Open in background
  - Set home page
- **Privacy Settings**
  - Clear cache
  - Clear history
  - Accept cookies
  - Clear all cookie data
  - Remember form data

- Clear form data
- Enable location
- Clear location access

- **Security Settings**
  - Remember password
  - Clear passwords
  - Show security warnings
- **Advanced Settings**
  - Website settings
  - Reset to default

When a ✓appears next to the option, the setting is enabled. To disable, tap the option again.

Email

Use **Email** to view and manage all of your email accounts in one application.

***Note*:** You must join a Wi-Fi network that is connected to the Internet before you can surf the web via the browser application.

Open Email

- From a **Home** screen or **Application** menu, tap the **Email** icon: .
- Input your email address and password and tap “Next.”
- Tap to select your account type: POP3, IMAP or Exchange.
- Tap “Next.”

- Enter the **Account Name** (optional) and **Your Name** (optional) to be displayed on outgoing messages, and then tap "Done."

The email application will start to download your messages to the tablet's email. It might take a few minutes for the messages to load completely.

Note: *When you have set up an email account, the account will open by default when you open* ***Email****.*

If you have more than one email account, the email accounts will appear in a **Your Accounts** list. Tap to select the account you wish to access.

- Enter **Email** interface, press the **Menu** key or tap . Then you can:
  - Refresh: Check for new messages.
  - Compose: Compose and send email messages.
  - Folders: View you email folders.
  - Accounts: View all accounts. To add a new account, press the **Menu** key or tap to select **Add Account**. To delete an email account, tap and hold the email account that you want to delete, and select **Remove Account**.
  - Account settings: Establish account settings.

Account Settings

- Enter **Email** interface, and press the **Menu** key or tap to show the menu bar.
- Select **Account settings**, and then you can:
  - Account Name: Edit your account name.
  - Your Name: Edit your name.
  - Email Check Frequency: Set it for Never, Every 5 minutes, Every 10 minutes, Every 15 minutes, Every 30 minutes, Every hour.
  - Default Account: Set from which account your emails will be sent t by default.
  - Email Notifications: See a notification on the status bar when a new email arrives.

- Select Ringtone: Set ringtone notification from the list.
- Incoming Settings: Modify incoming server settings.
- Outgoing Settings: Modify outgoing server settings.

Reading Emails

- Enter **Email** interface, select an email and tap to open it.
- Reply to email messages, by selecting **Reply** or **Reply All**.
- Delete an email message by tapping “Delete.”
- Press the **Menu** key or tap to show the menu bar, and then you can:
  - Delete an email message.
  - Forward an email message.
  - Reply email message.
  - Mark email message as unread.

Gallery

- From a Home screen or Application menu, tap the **Gallery** icon to enter the picture mode.
- Select a folder and tap it to enter . The photos are displayed as thumbnails.
- If you want to change the **View** mode, select the mode desired at the top right of the screen from this icon:

  .
- When viewing a picture from a file, select the **Zoom** icon to enlarge or shrink the image. Or tap “Menu Options.”
- Tap “**More**” to see options for sharing, deleting, pruning, rotating, setting as wallpaper, and for detailed information about other operations.

Video

- From a Home screen or Application menu, tap **Gallery** icon to enter photo or video viewer.
- Select a folder by tapping it; the photos and videos are displayed in thumbnails.
- To change the **View** mode, select the mode desired at the top right of the screen from this icon: .
- Select and tap desired video.

Share Photos and Video

- From a Home screen or Application menu, tap **Gallery** icon to enter photo or video viewer.
- Open desired thumbnail，then choose **Need to Share Pictures or Video**.
- Quickly press the **Menu** button , touch “Select” or “Select All,” and then tap “Share.”

Music Player

The **Music** application lets you play digital audio files stored in the tablet’s internal memory or in a memory card.

- From a Home screen or Application menu, tap **Music** icon to enter music library.
- The music is displayed into different categories, such as **Artists**, **Albums**, **Songs**, **Playlists,** and **Now Playing**.
- Tap to select a category and tap a song in the category to start playback.
- Press **Back** key or tap to return to previous screen.

From the music library interface, select a song and hold until a pop up a window appears. Then you can

- Play the selected song,
- Add to playlist,
- Delete the song,

- Search song from music library or Internet.

While listening to music,

- Tap to select songs from the list.
- Tap to turn **Shuffle** on or off.(**Shuffle** is active when the icon is gray.)
- Tap to cycle through the repeat modes: **Repeat All Songs, Repeat Current Song, Repeat Is Off.**
- Tap to **Pause** or **Resume** the song playback.
- Tap to go to previous or next song.
- Drag the progress bar to the desired playing point in a song, as well.

From the playing interface, press **Menu** key or tap ,to see a pop-up a menu bar.

- Tap **Library** to go to music library
- Tap **Party Shuffle** to turn Party Shuffle on or off.
- Tap **Add To Playlist** to add a song to a playlist.
- Tap **Delete** to delete a song.

Video Player

The **Video Player** application lets you play video files stored in the tablet's internal memory or in a memory card.

- From a Home screen or Application menu, tap **Video Player** icon to enter video library.
- Select and tap a video to start playback.
- Press **Back** key or tap to return to previous screen.

While viewing a video, you can tap the touch screen to pop up a tool bar, which allows you to select viewing options..

Clock

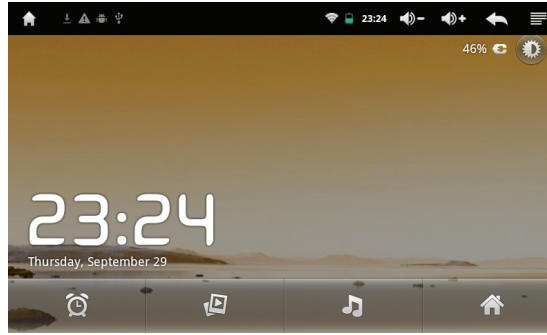

- The Clock application can display date and time, play music, play a slide show, and be set as an alarm.
- From a Home screen or Application menu, tap **Clock** icon to enter the clock application.

Slide show

- This is the **Gallery** photo slide show mode.
- Tap the icon to start slide show, tap icon to end playback.

Music Player

- The clock shows the time as the music plays.

- Tap the icon to play music.

Alarm screen brightness adjustment

- Tap the icon to adjust the brightness of the screen; a long press will only display the date and time with a black background. Tap anywhere on the screen to restore brightness.

Set the alarm clock

- Tap the icon to set the alarm clock.
- Tap the icon to open or close the alarm; if the icon is green, the alarm clock is open.
- Touch alarm to reset the time and other parameters, or tap icon and select **Add Alarm** to add a new alarm clock

  Select **Time** to set the alarm time.

  Select **Ringtone** to select alarm ringtone.

  Select **Repeat** to the set the alarm repeat time.

  Select **Label** to give the alarm a name.

  When done setting the alarm, tap “Finish.”

  When the alarm rings, choose **Pause, Again, Ring** or **Cancel**.

Calculator

You can use the Calculator to perform simple and advanced calculations.

- From a Home screen or Application menu, tap **Calculator** icon to enter the calculator application.
- Tap on the numbers and mathematical operators present on the screen to perform simple calculations.
- Press the **Menu** key/tap to pop up a menu bar featuring the **Advanced Panel**, to access operators such as sin, cos, tan, log, etc.
- To clear calculation histories, tap icon again.
- Press **Menu** key/tap to exit and return to previous screen.

AppInstaller

Manage applications. Install and uninstall application.

- From a Home screen or Application menu, tap **AppInstaller** icon to enter AppInstaller application.
- Select an application source, device source, memory card, or SD card, and then add it to the list of applications.
- Then select **Install** or **Cancel**.
- Alternately, in the application list interface, tap on the application, then the tap the icon for a pop-up menu：

  Install/Uninstall: To install or uninstall the selected application program.

  Select all: Select all applications.

  Unselect all: Deselect all.

Fresh: Refresh the list of applications.

About: To view the AppInstaller information.

***Note**: Applications downloaded from the web can be from unknown sources. To protect your device and personal data, download applications only from trusted sources. Also, download and install the applications that match your device with the Android 2.3 operating system.*

File Browser

You can use the File Browser for edit and delete files.

- From a Home screen or **File Browser** menu, tap **File Browser** **icon** to enter the File Browser.
- Select **File Management**, and then tap the icon that corresponds to what you want:

Display device list: displays device's internal memory and SD card

Multiple choice or open mode: Select one or more files for editing management; A ✓mark indicates a file has been selected. Touch the documents to select again.

Display editing menu: Cut, copy, paste, delete file.

Display sort menu: Select the file sort mode.

Return to previous screen.

The thumbnail display file.

Display help.

Close/exit file manager.

Settings

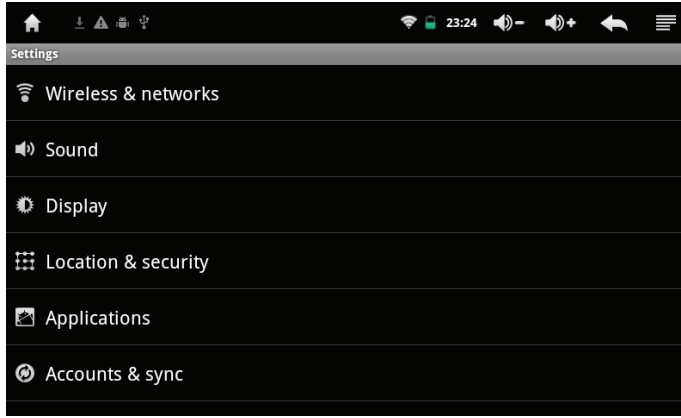

The **System Settings** let you customize and configure your device.

- From a Home screen or Application menu, tap **Settings** **icon** to enter **Setting** interface. Or, from the Home screen, press **Menu** key/tap , and then select **Settings** on the menu bar.
- Tap the settings items to make the desired configuration. A ✓mark indicates that the option is activated.
- Press **Back** key or tap to exit and return to the previous screen.

Wireless & Networks: Configure your device's wireless connections, such as Wi-Fi.

Sound: Sets the device and notification ringtones

- Silent mode: Silence all sounds except media & alarms
- Media volume
- Notification ringtone
- Audible selection: Play sound when making screen selection
- Screen lock sounds: Play sounds when locking and unlocking the screen

Display: Set screen brightness and screen timeout.

- Brightness
- Auto-rotate screen
- Animation: All window animations are shown
- Screen timeout: Adjust the delay before the screen automatically turns off.

Location & Security: Sets location and security.

- Use wireless networks: See location in applications(such as Maps) using wireless networks
- Set up screen lock: Lock screen with a pattern, PIN, or password
- Visible passwords: show password as you type

Applications Manage applications.

- Compatibility Mode: Run older apps in compatibility mode.
- Manage applications: Manage and remove installed applications.
- Storage use: View storage used by applications.

Accounts & Synchronize

General sync settings

- Background data: Applications can sync, send, and receive data at any time.
- Auto- sync: Applications sync data automatically.

Manage accounts

- Add account

Privacy: Restore all settings to the factory default.

Storage: Show the available storage card memory (when Micro SD card is inserted) or the device's internal memory (when no Micro SD card is inserted).

Language & keyboard Set the language and keyboard.

- Select locale
- User dictionary
- Android keyboard

Voice Input & Output

Accessibility

Date & Time: Set date and time.

About Device: View information about your device.

Set Date and Time

- From a Home screen or Application menu, tap **Settings** **icon** to enter Setting interface. Or from the Home screen, press **Menu** key/tap , and then select **Settings** from the menu bar.
- Select **Date & Time** and tap to enter., Then you can:
  - Automatic: Use network-provided values
  - Set date: Tap **+** or **–** in each date field to change the **Month**, **Day** and **Year**, then tap “Set” to confirm the date setting.
  - Select time zone
  - Set time: Tap **+** or **–** in each time field to change the **Hour** and **Minute**, then tap “Set” to confirm the time setting.
  - Use 24-hour format or A.M/P.M.
  - Select date format

Frequently Asked Questions

1. My tablet does not turn on.

- Make sure that the power adapter is securely connected
- Make sure that you are using the power adapter that was included with your tablet.
- Make sure that the tablet is turned on.

2. My tablet does not recognize the memory card.

- Make sure that you have inserted a certified memory card.
- Make sure that you have inserted the memory card correctly.
- With your memory card inserted, power off and reset the device.

3. My tablet shows a low-battery warning.

- The tablet is low on power and needs to be charged before you can use it.

4. I cannot access the Web.

- Check the wireless signal indicator in the status bar at the top of the screen. If there is no signal, you are not connected.

5. The display freezes or does not respond.

- Press and hold the power button to turn tablet off and then turn it on again.

6. There is no sound coming from the tablet.

- Unplug and reconnect the headset. Make sure that the connector is pushed in all the way.
- The volume may be deactivated or set too low.

Specifications

Display	Digital LCD, TFT, Capacitive Touch screen Panel size: 7 inches Screen aspect ratio: 16:9 Resolution: 800*480 pixels
Operating system	Android 2.3
Speaker	Build -in speaker 1 pc.
Build- in memory	2-32G
Support Card	Micro SD
USB Device	Mini USB 2.0 (high speed) device
Wireless	Yes, 802.11 b/g
Power Supply	AC Adapter, 5V2A
Size L*W*H ： （mm）	196*112*12

Limitations of Liability Statement

Links to Third Party Sites

The Ematic User Manual may contain links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations whatsoever about any other website which you may access through this user manual. When you access a non-Ematic website, even one that may contain an Ematic logo, please understand that is independent from Ematic, and that Ematic may have no control over the content on that website. In addition, a link to a non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or the use, of such website. It is up to you to take precautions to ensure that whatever you select for your use is free of such items as viruses, worms, Trojan horses and other items of a destructive nature.

Limitation of Liability

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages(including loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to hold Ematic entirely harmless from and you covenant not to sue Ematic, or its affiliates, successors or assigns, for any claims related to Ematic. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Android and YouTube are registered trademarks of Google Inc. Use of these trademarks are subject to Google Permissions. Kindle is a registered trademark of Amazon; APKShare.com is a registered trademark of

APKShare.com. Microsoft, Windows, Microsoft Office Word, Microsoft Office Excel, and Microsoft Office PowerPoint, are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Appoke is a registered trademark of Appoke. Box.net is a registered trademark of Box.net.

12:47 AM
John
5/21/2011
To: sarah@emailinbox.com
3:28 PM
Check out the new farm!
Hey Sarah,
I sure hope you're not too busy this summer. The new farm is great and we all can't wait to see you again and hear your awesome stories. Come visit soon!
Hope all is well,
John
Reply
Reply all
Delete

©2011 Ematic. All Rights Reserved. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.